

# CANE CREEK<sup>®</sup>

## HELLBENDER

BOTTOM BRACKET

## BSA30 - Threaded

30mm Spindle ONLY  
BSA30 = 68mm, 73mm

### Installation

#### ① Measure

Mesure  
Messen  
Misurare

#### ② Grease


Graisse  
Fetten  
Grasso

#### ③ Thread

Visser  
Einschrauben  
Avvitare

#### ④ Torque

Serrer  
Festziehen  
Serrare

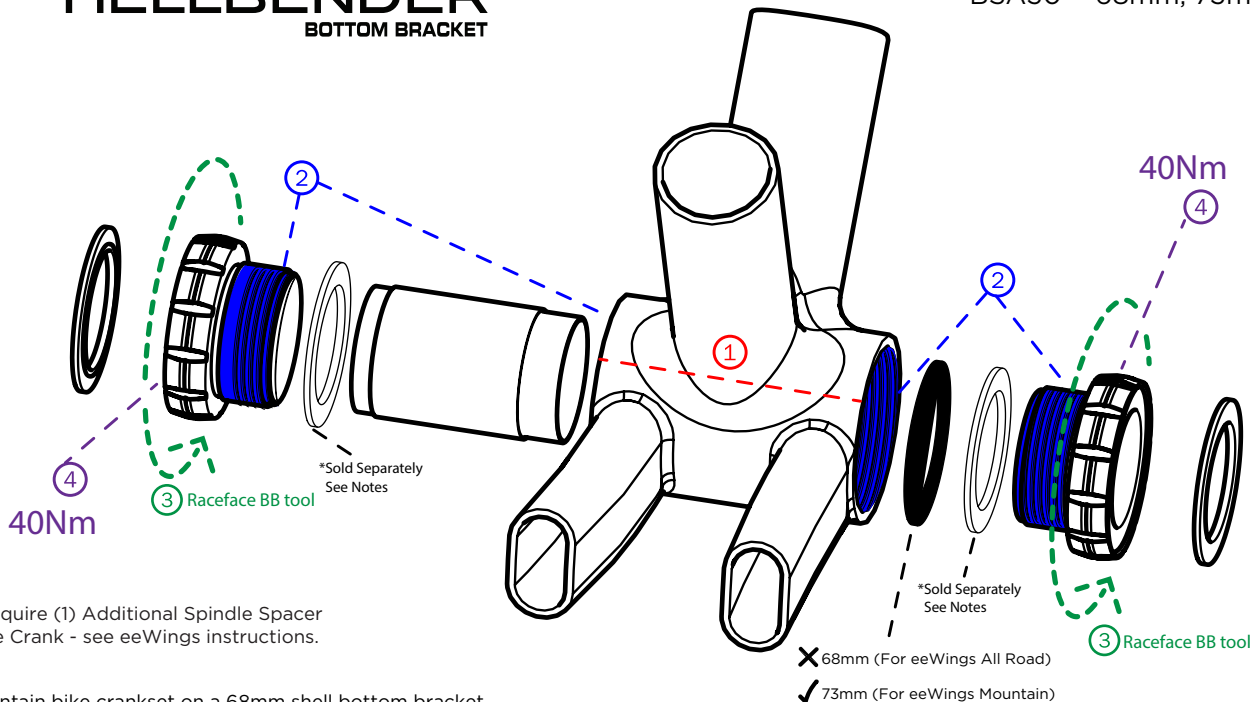

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.

\*In order to use a mountain bike crankset on a 68mm shell bottom bracket, You will need to purchase a Cane Creek Spacer Kit (Part Number: BAI0110) which contains (2) aluminum 2.5mm bottom bracket spacers shown above.